


CTB Bag Filter Housing Assembly Instructions

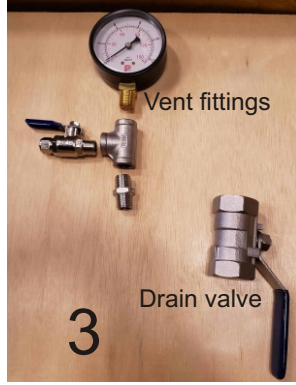

1. Clamp-Ring or Swing-Bolt Top
2. Support Cage & Bag Pressing
3. Vent Fittings & Drain Valve
4. Adjust leg height to minimum 6" & install drain valve and outlet fitting connections



5. Insert bag support screen
6. Insert filter bag
7. Ensure filter bag top support is fully inserted into support cage
8. Insert Bag Pressing assembly



9. For hinged Swing-Bolt lid, close the lid onto the spring & tighten 4 swing-bolt evenly
10. For Clamp-Ring lid, position the lid on top of the spring
11. Loosen the clamp bolt, hold clamp on the joint with fingers while pushing down w/ your thumbs
12. Hold clamp ends together with thumb and forefinger while clipping the bolt end to the hinged clasp

13. Tighten clamp bolt and remove vent port threaded plug for vent assembly
14. Assemble vent fitting components using SS thread tape and install into vent port

